



Assembly Manual

PART LIST

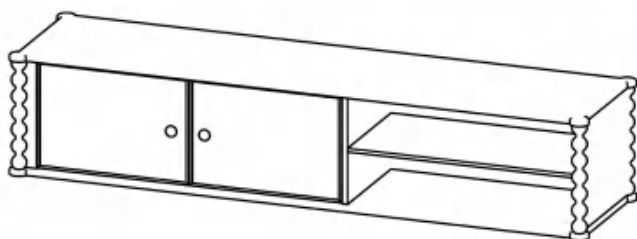

A


1 PC

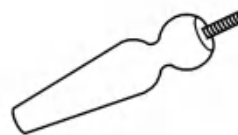


B

4 PCS


1

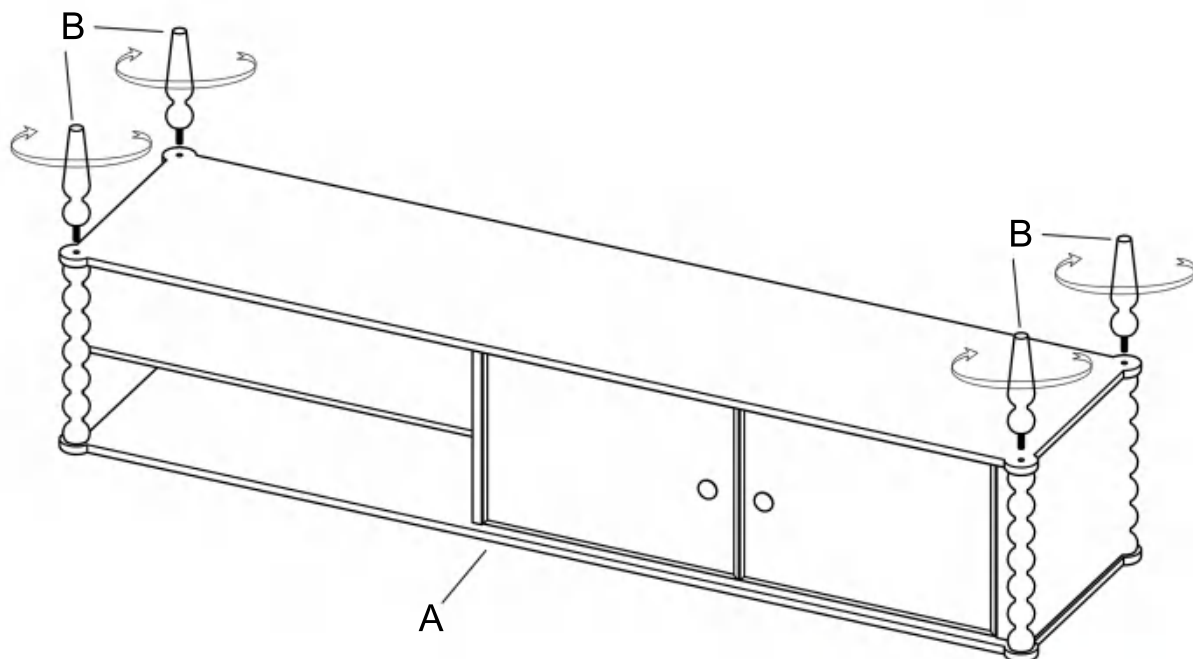

2

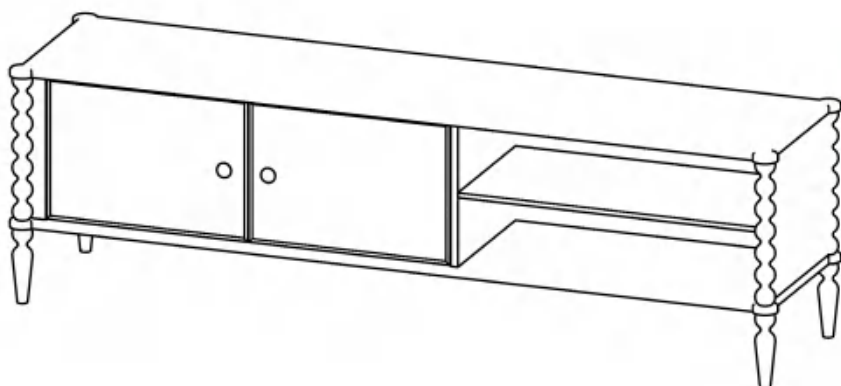

⚠ WARNING

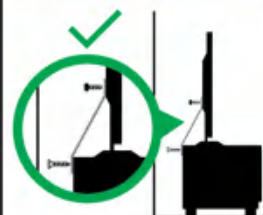

Children have died from furniture tipover.

- ALWAYS secure your television with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.