

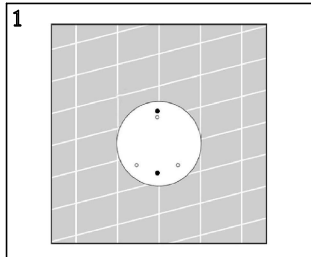



early settler

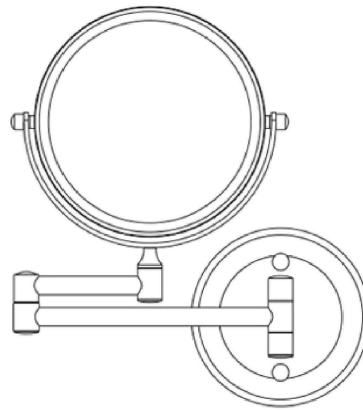


Place the mounting palate at the intended installation position and mark the positions of screw holes

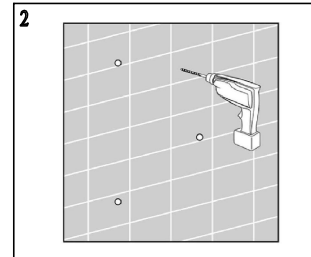

Drill suitable holes on the marked spots with an electric drill, then insert wall plugs

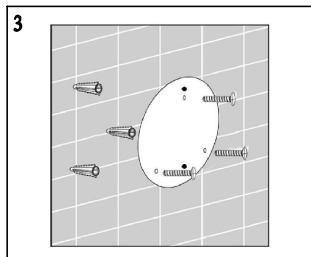

**Tap the expansion screw in to the holes.
Align base plate holes with wall holes, tighten screws**

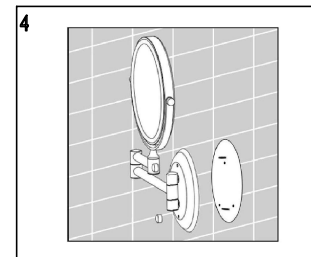

Align mirror holes with wall plate cover the nuts, finished