

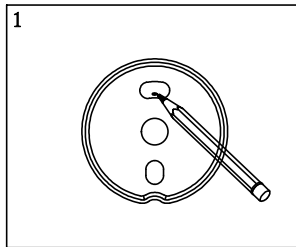



early settler

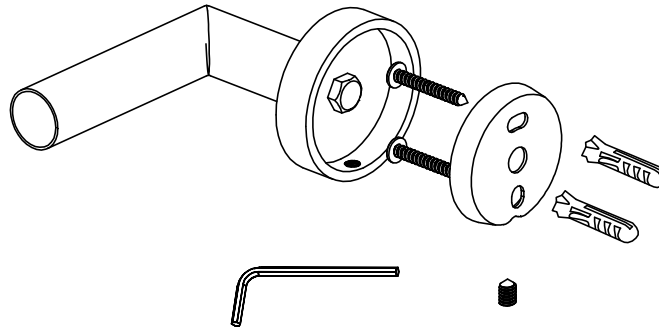


1
Place the mounting palate at the intended installation position and mark the positions of screw holes

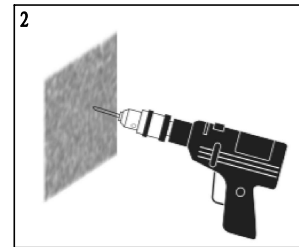

2
Drill suitable holes on the marked spots with an electric drill, then insert wall plugs

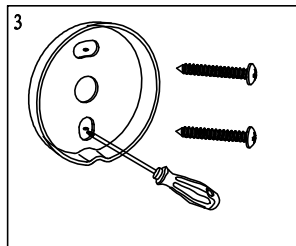

3
Align the mounting plate with the wall plugs and fasten the screws

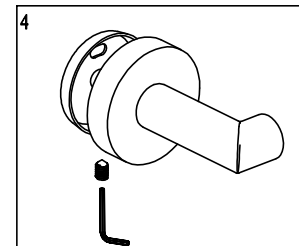

4
Fit on the base and tighten the screw using an Allen key