







ASSEMBLY INSTRUCTIONS
Avalon Queen/King Bed

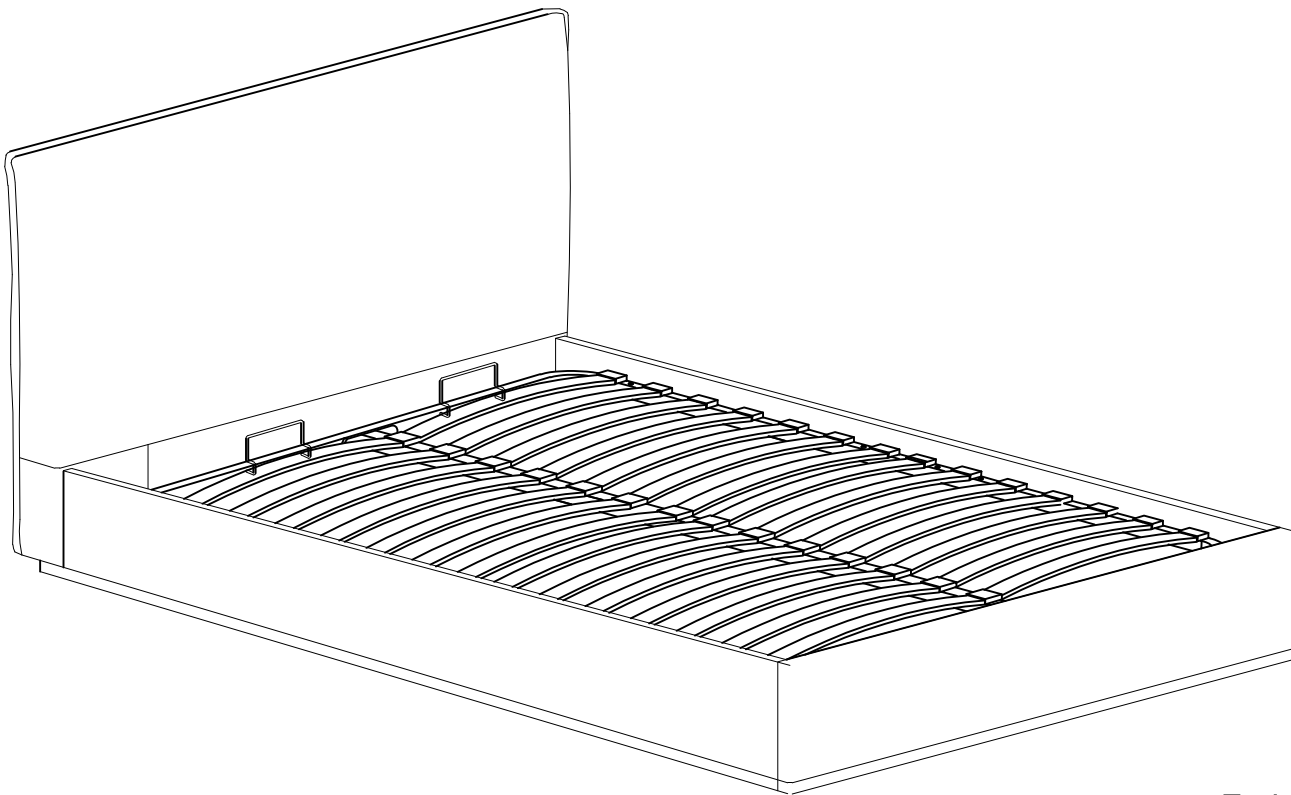



Tools Needed
2 person build













Attention: Below hardware is packed in the fitting box:

 Big Head Bolts (M8*18) ① X 12	 Handle ② X 1	 Small Bolts (M8*25) ③ X 12	 Screws(M5*40) ④ X 4	 Brackets ⑤ X 6
 Allen Key (M5) ⑥ X 1	 Felt pads ⑦ X 9			


Attention: Below hardware is packed with slat frame,do not throw away the red plastic bag.

 Allen Key (M5) ⑥ X 1	 Washers (M8) ⑧ X 24	 Medium Bolts (M8*45) ⑨ X 8	 Large Bolts (M8*80) ⑩ X 4	 Nuts (M8) ⑪ X 12
 Spanner ⑫ X 1				

PART LIST

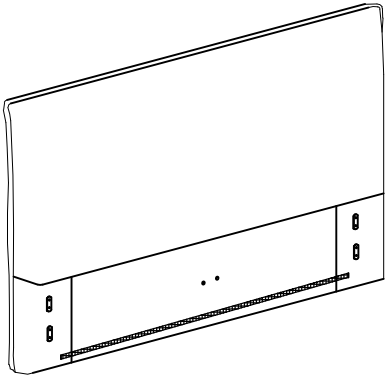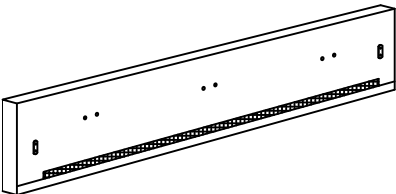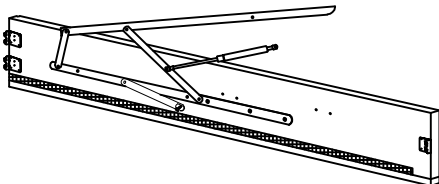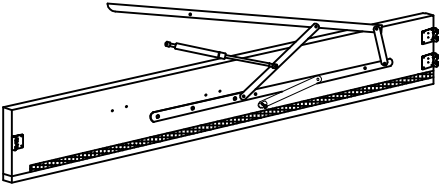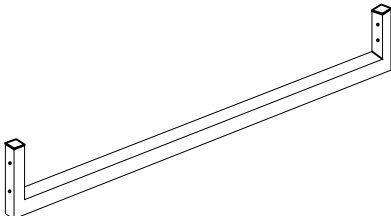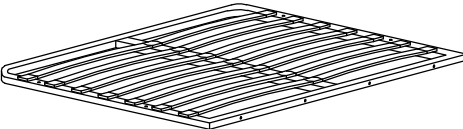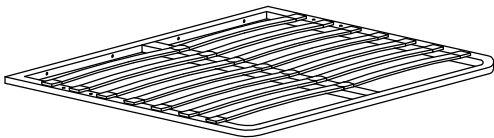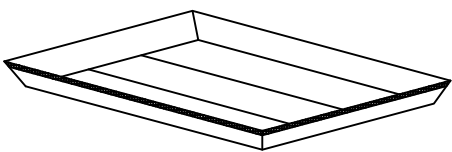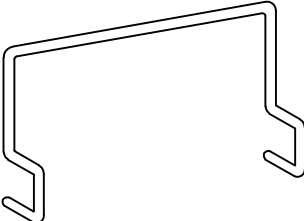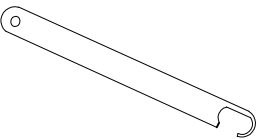
		
Headboard A X 1	Footboard B X 1	Right Side Rail C X 1
		
Left Side Rail D X 1	Metal Cross Rail E X 1	Slat Frame F X 1
		
Slat Frame G X 1	Baseboard H X 1	Mattress Stopper I X 2
		
Safety latch J X 2		

Step 1

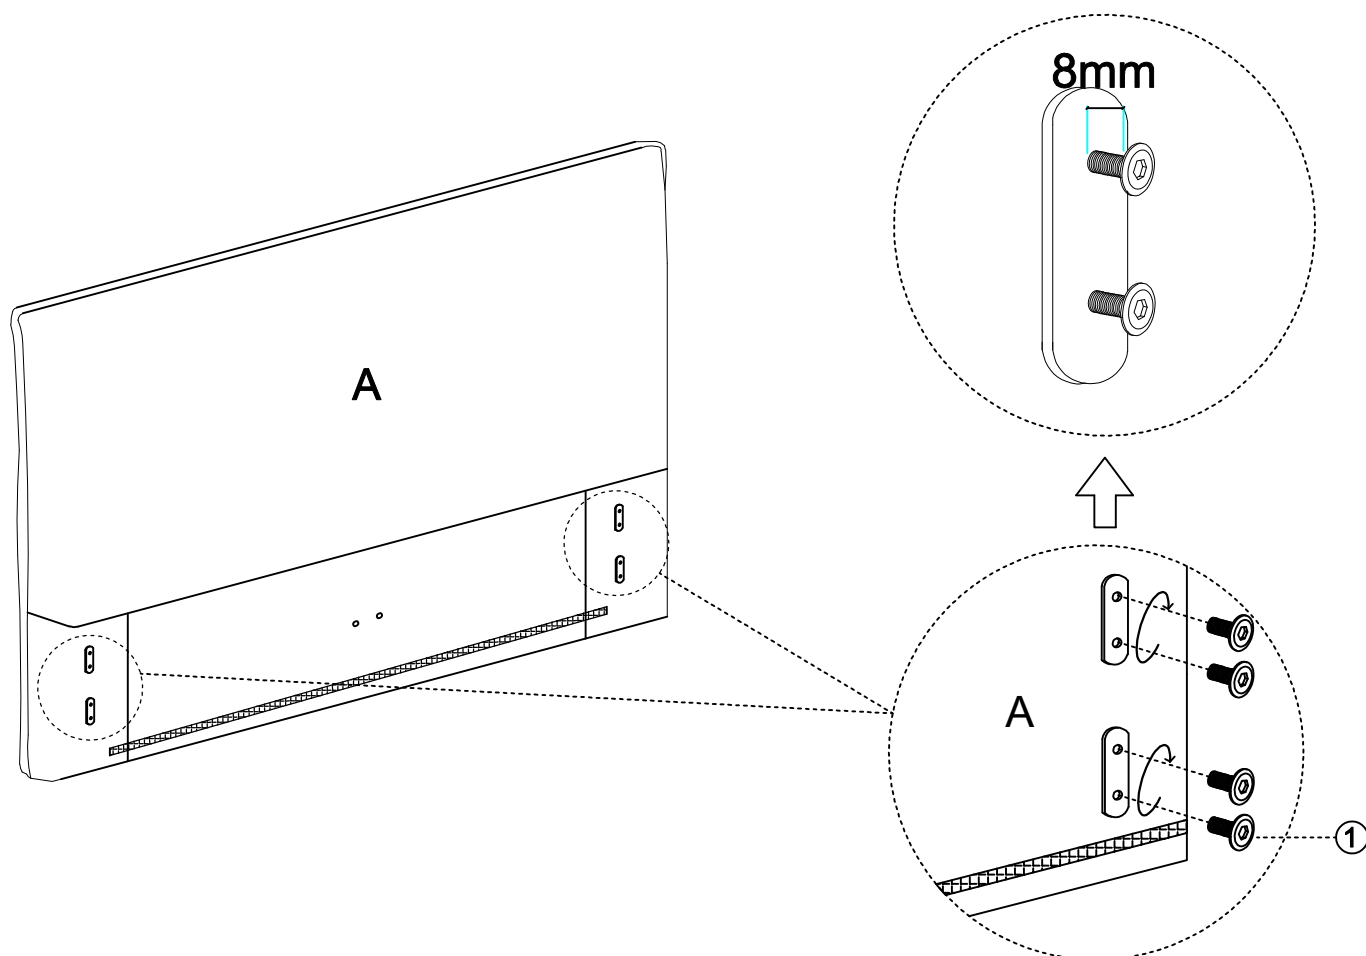


Install 8 x big head bolts ① to the headboard (A) and keep them 8 mm loose.
Do not fully tighten the big head bolts ① until Step 7.

Step 2

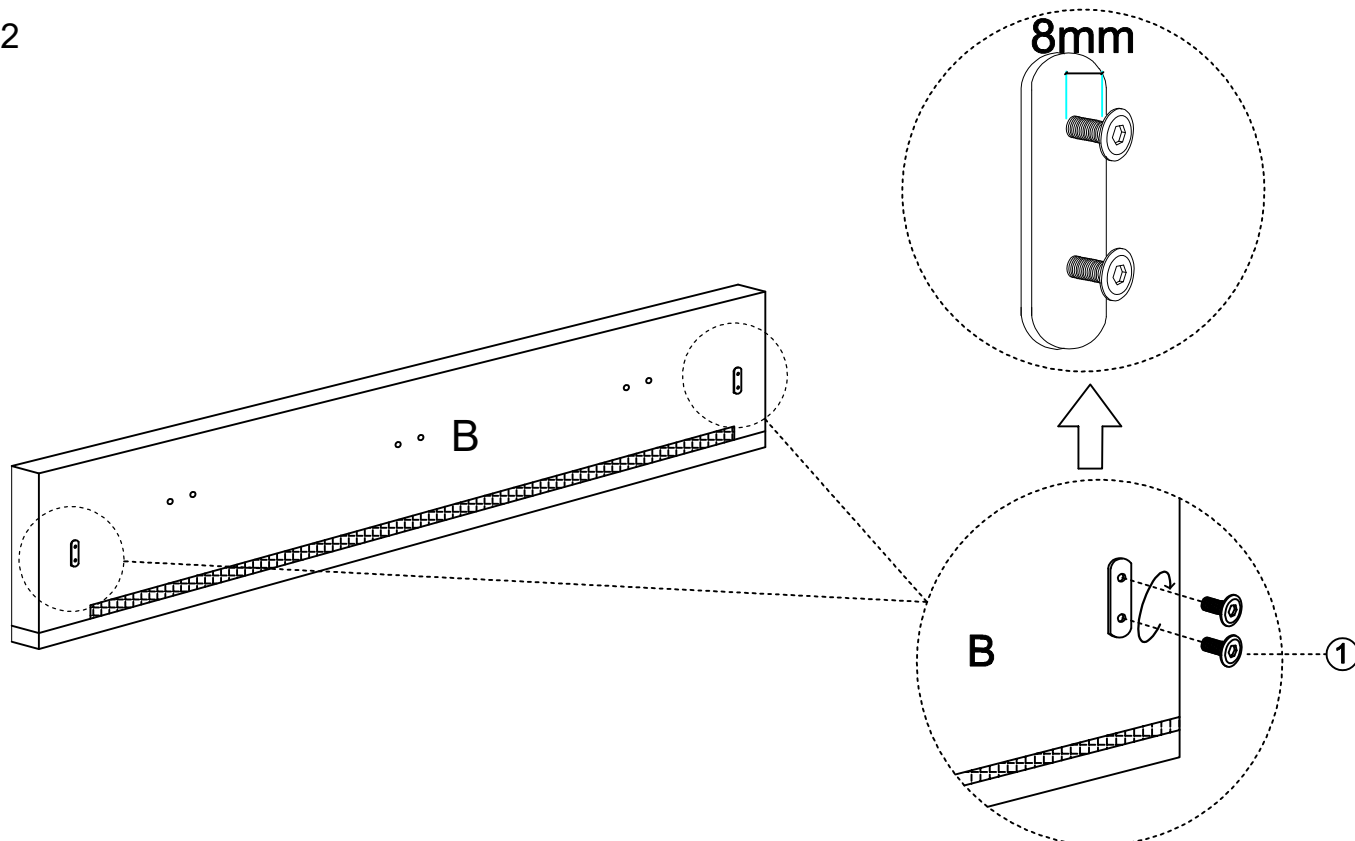


Install 4 x big head bolts ① to the footboard (B) and keep them 8 mm loose.
Do not fully tighten the big head bolts ① until Step 7.

Step 3

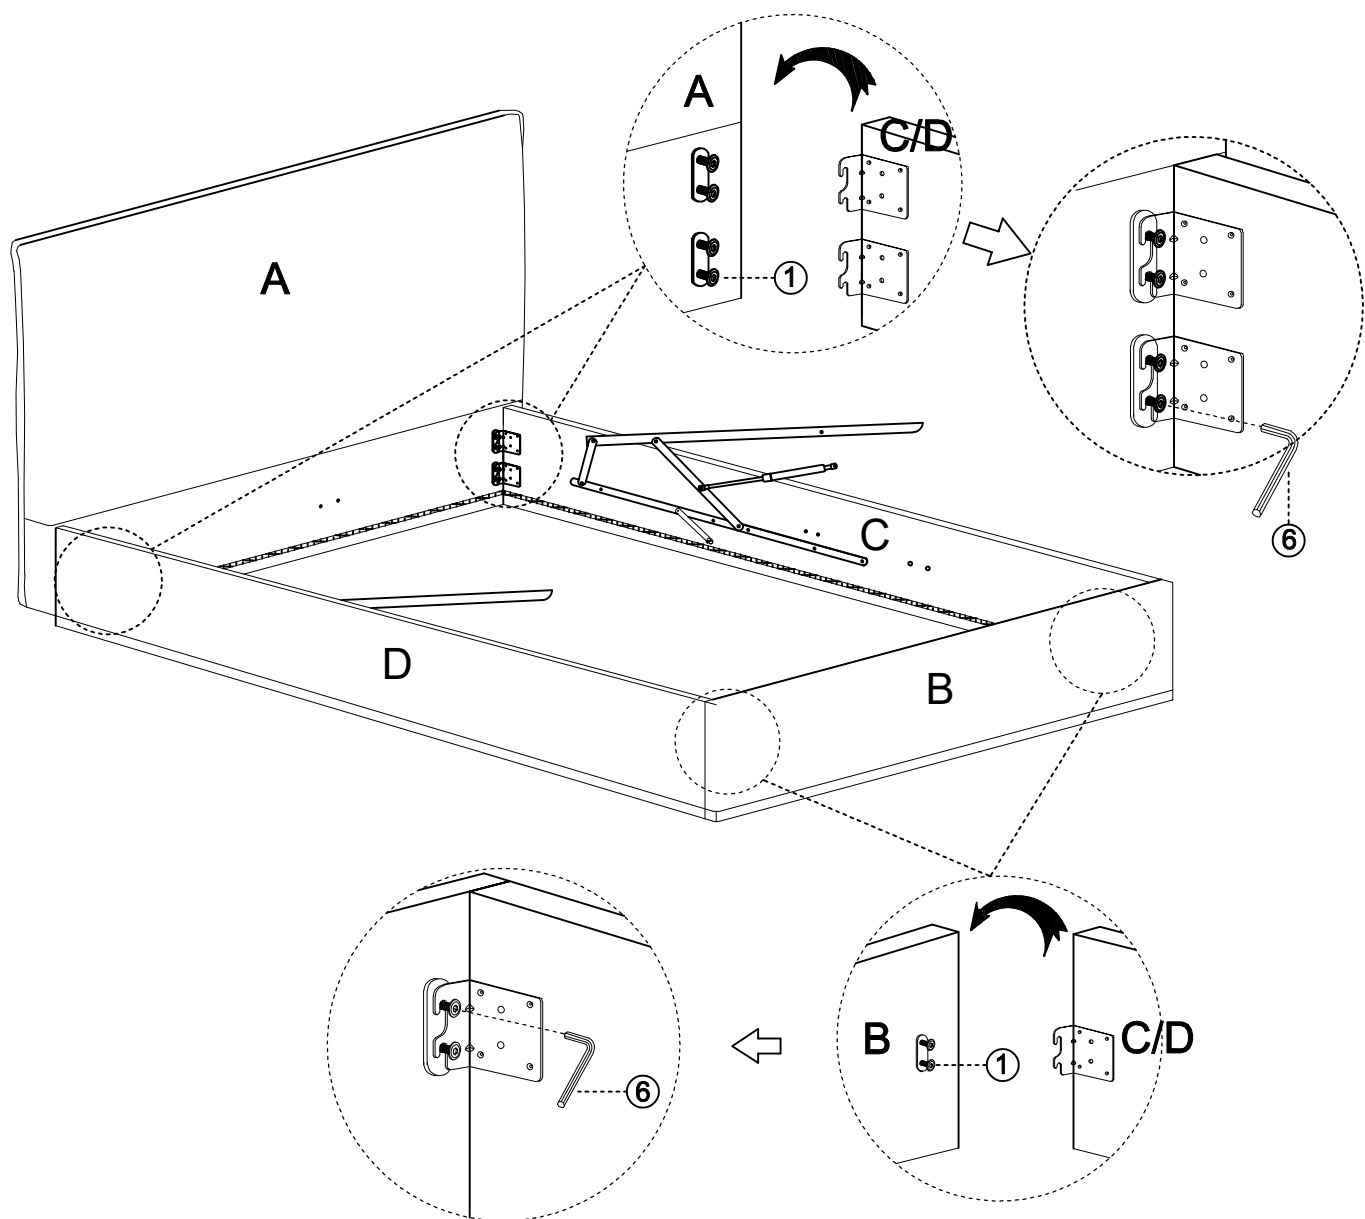


Attach side rails (C,D) to headboard (A) over the bolts as shown.
Attach side rails (C,D) to footboard (B) over the bolts as shown.
Do not fully tighten the big head bolts ① until Step 7.

Step 4

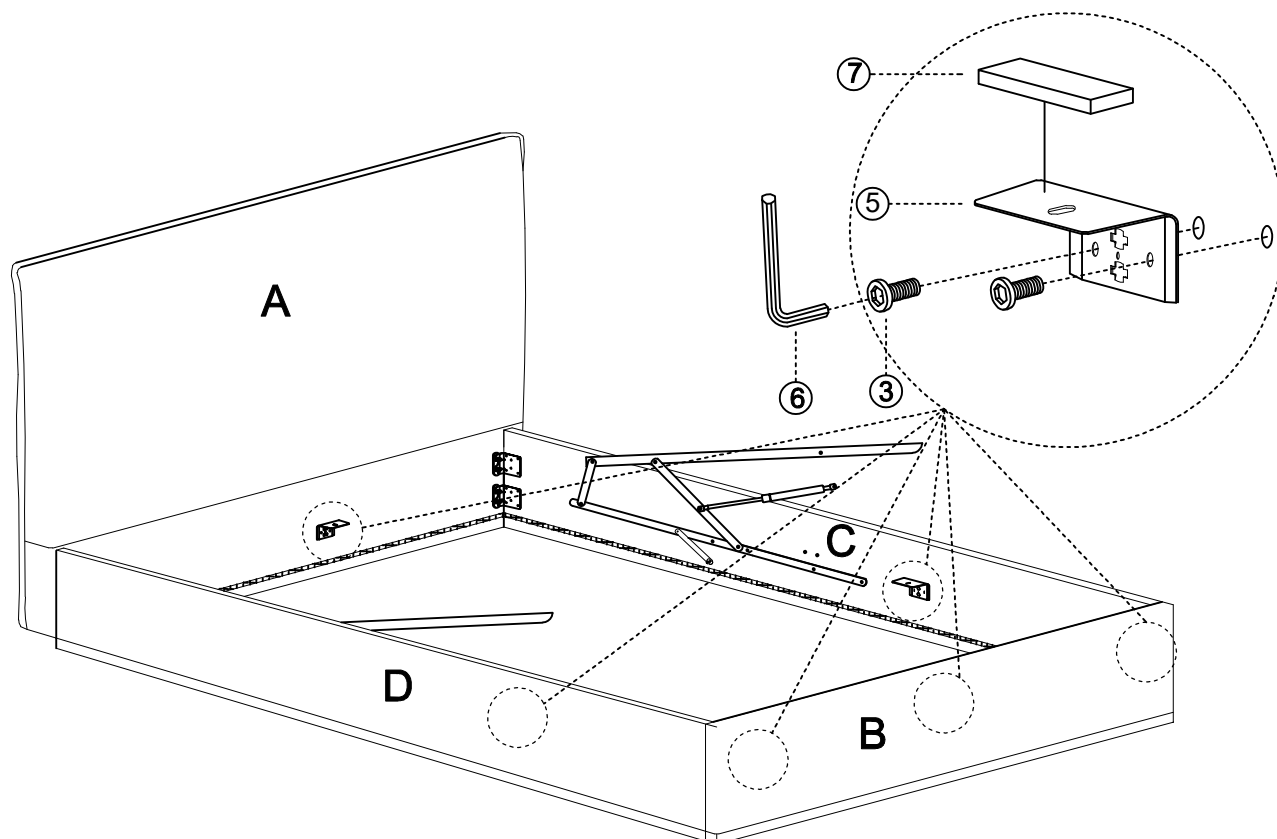


Attach 6 x brackets ⑤ to side rails (C,D), headboard (A) and footboard (B) with 12 x small bolts ③ by using allen key ⑥
Stick 6 x felt pads ⑦ onto 6 x brackets ⑤.

Step 5

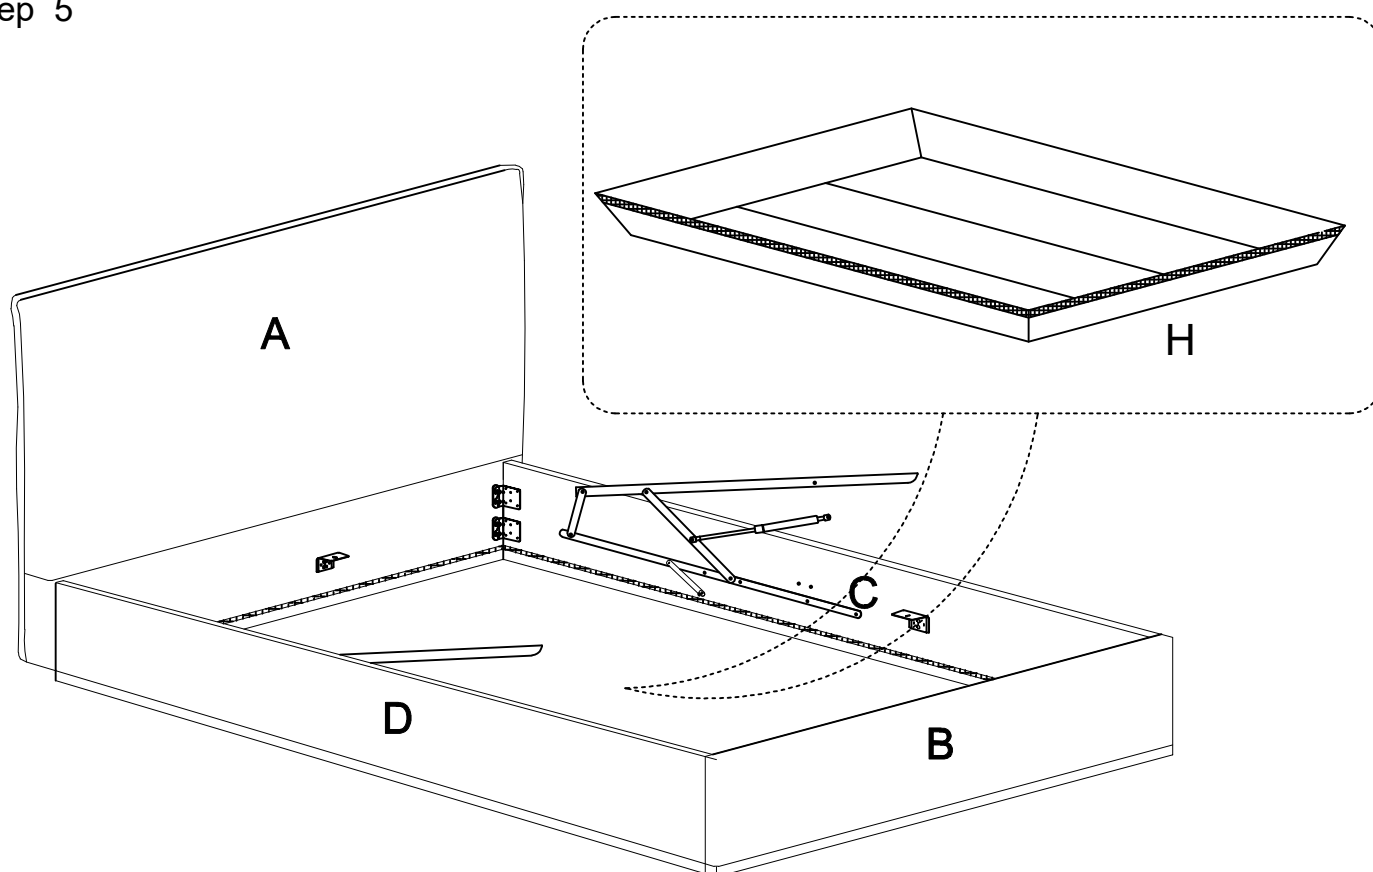


Place the baseboard (H) into the bed as shown and velcro to all sides.

Step 6

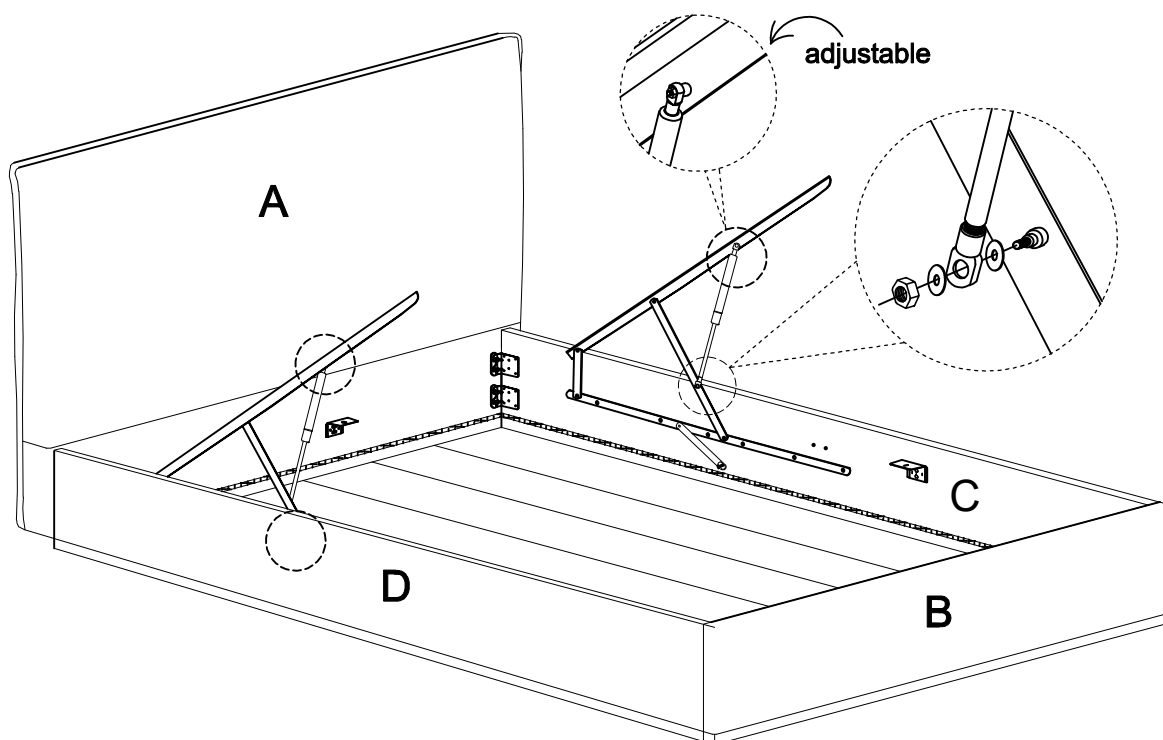


Loosen the nuts and washers on the bottom of rod bracket, attach the gas struts to the bottom of rod bracket using the bolt, then tighten the nut and washers. The bolt on the top of gas struts is adjustable, if the nuts and washers on the bottom of rod bracket can't be fitted.

Step 7

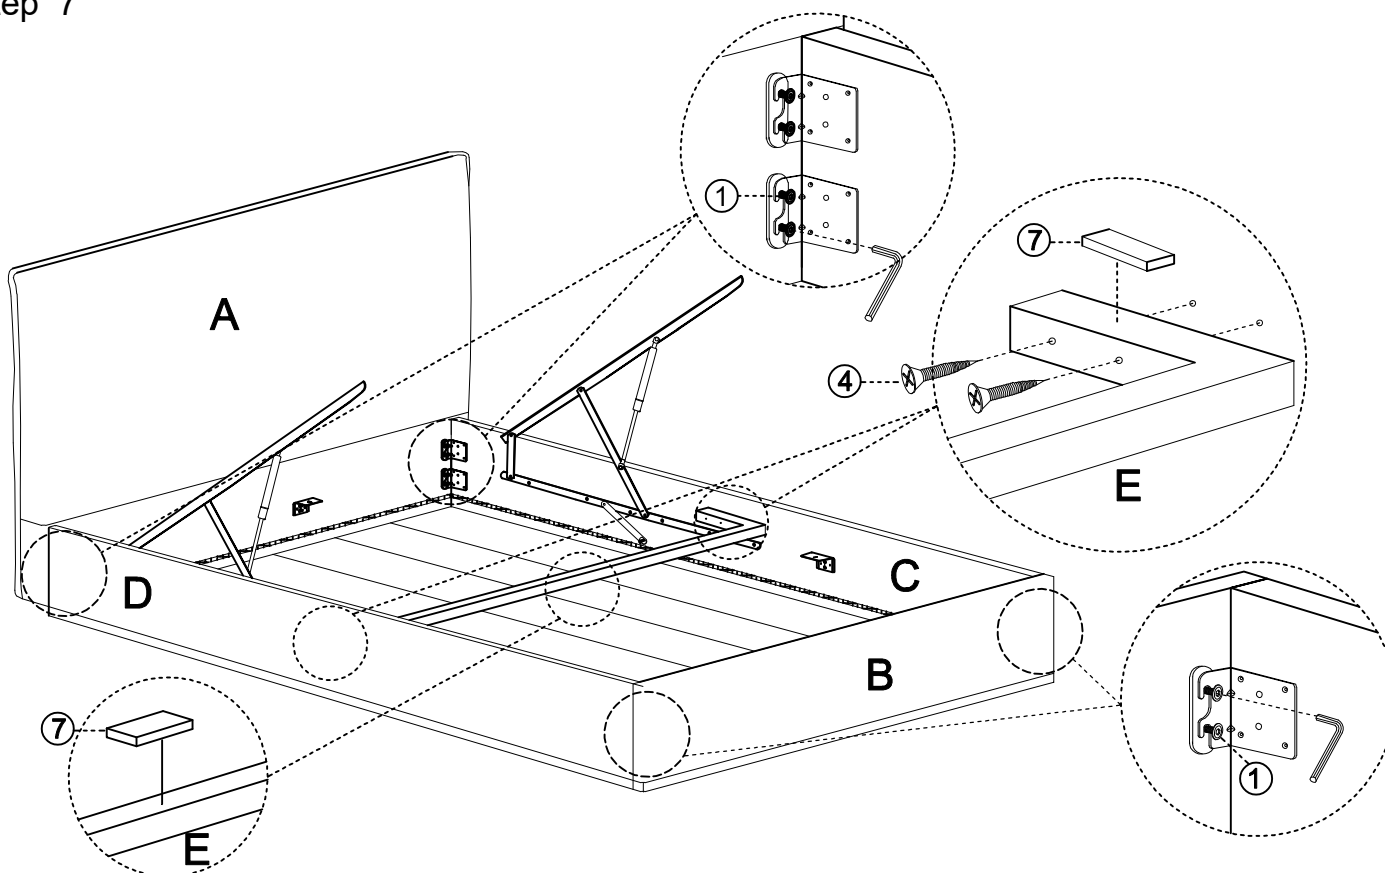


Attach the metal cross rail (E) to the side rails (C/D) with 4 x screws ④ by using phillips head screwdriver (not provided). Stick 3 x felt pads ⑦ onto the middle and two ends of metal cross rail (E). Then, fully tighten all the big head bolts ① on the four corners. Make sure baseboard (H) velcro to all sides.

Step 8 - Assembling the Slats Frame

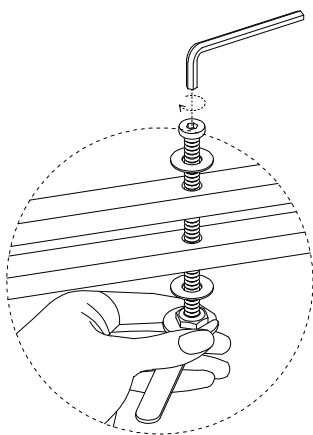


Fix the nut ⑪ at one end of large bolt ⑩ by using spanner ⑫, then tighten the large bolt ⑩ by using allen key ⑥.

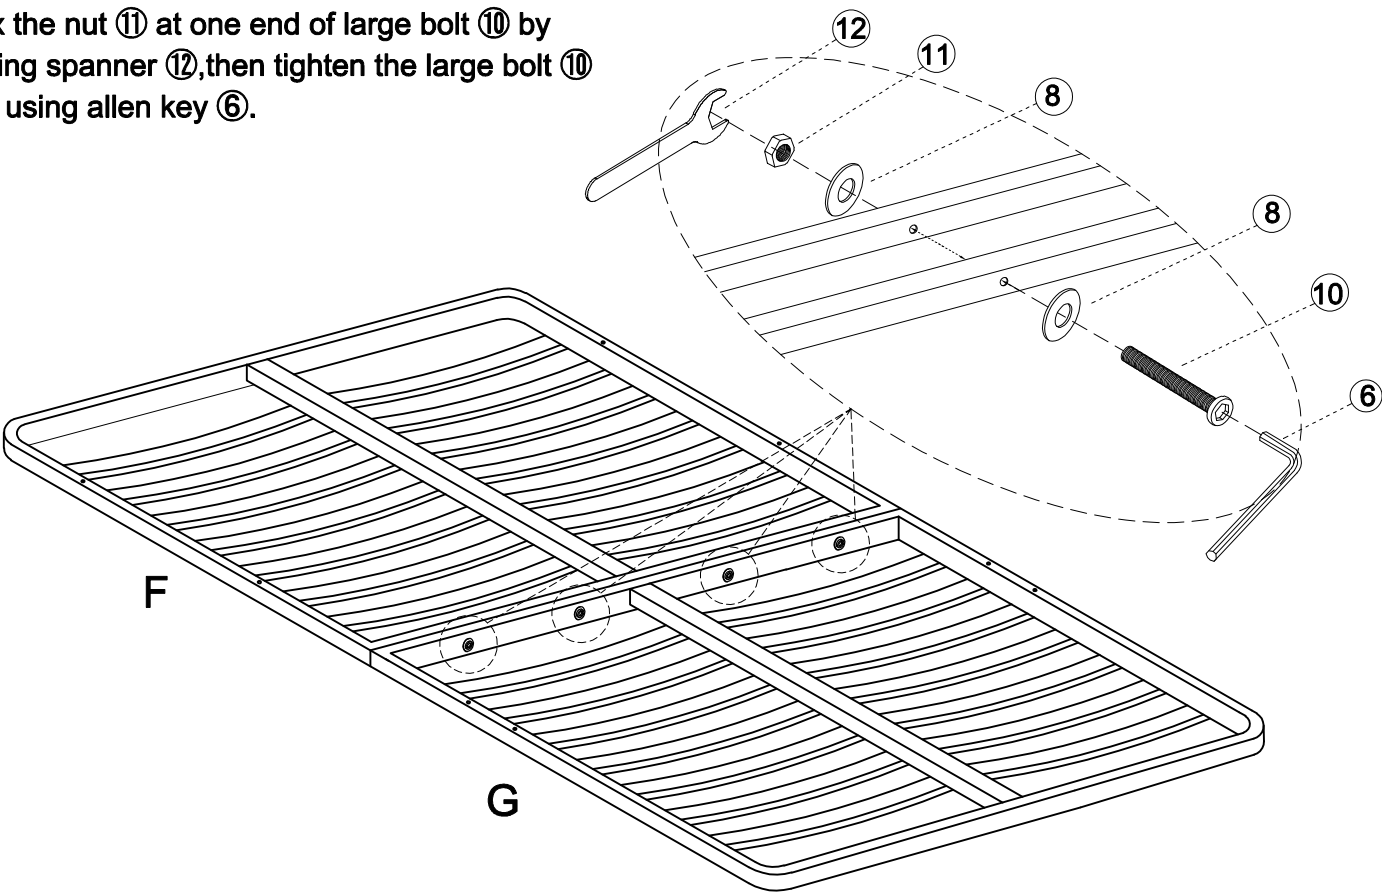



Place the folded slat frame as shown. Attach the two parts together with 8 x washers ⑧, 4 x nuts ⑪ and 4 x large bolts ⑩ by using Allen key ⑥ and spanner ⑫.

Step 9 - Attaching the Slats Frame to the Bed

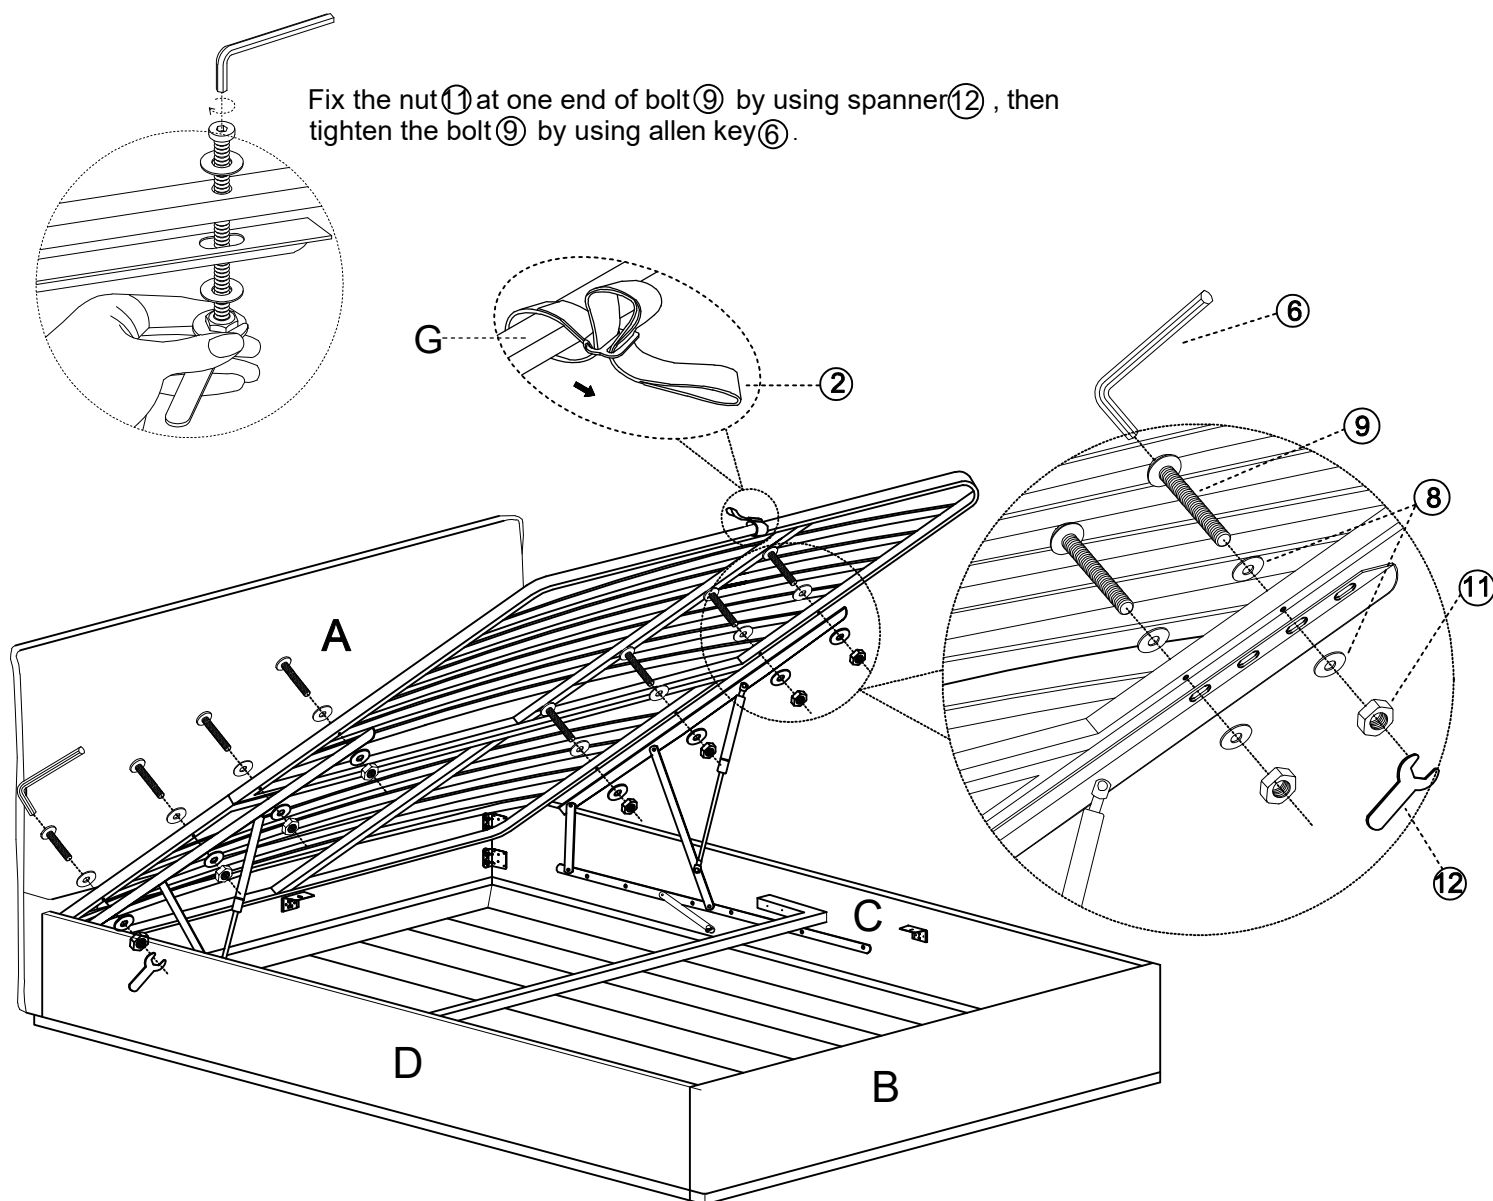


Ensure the bed inner space is square.


Attach slat frame (F,G) to mechanism +piston (C,D) using 8 x bolts ⑨, 8 x nuts ⑪, and 16 x washers ⑧. Do not fully tighten all the Bolts ⑨ until step 10.

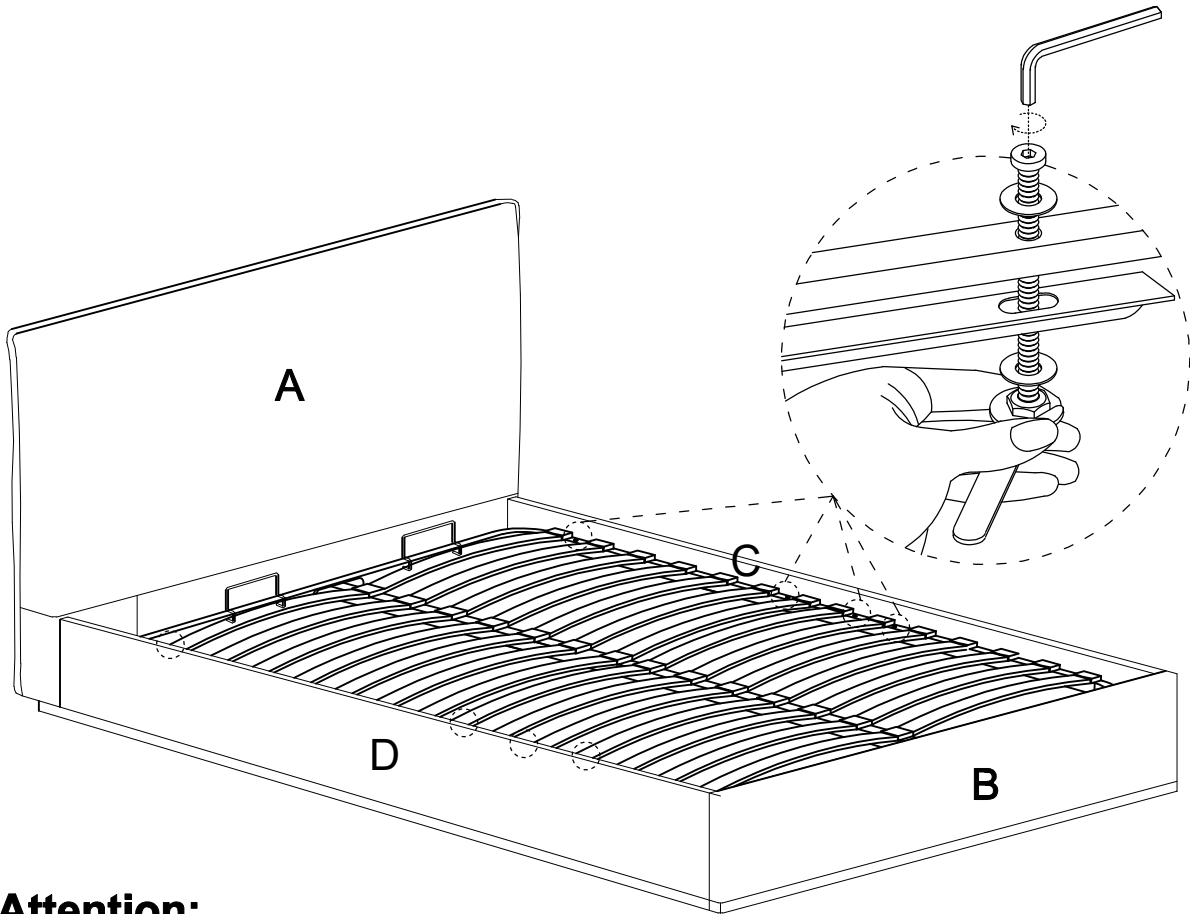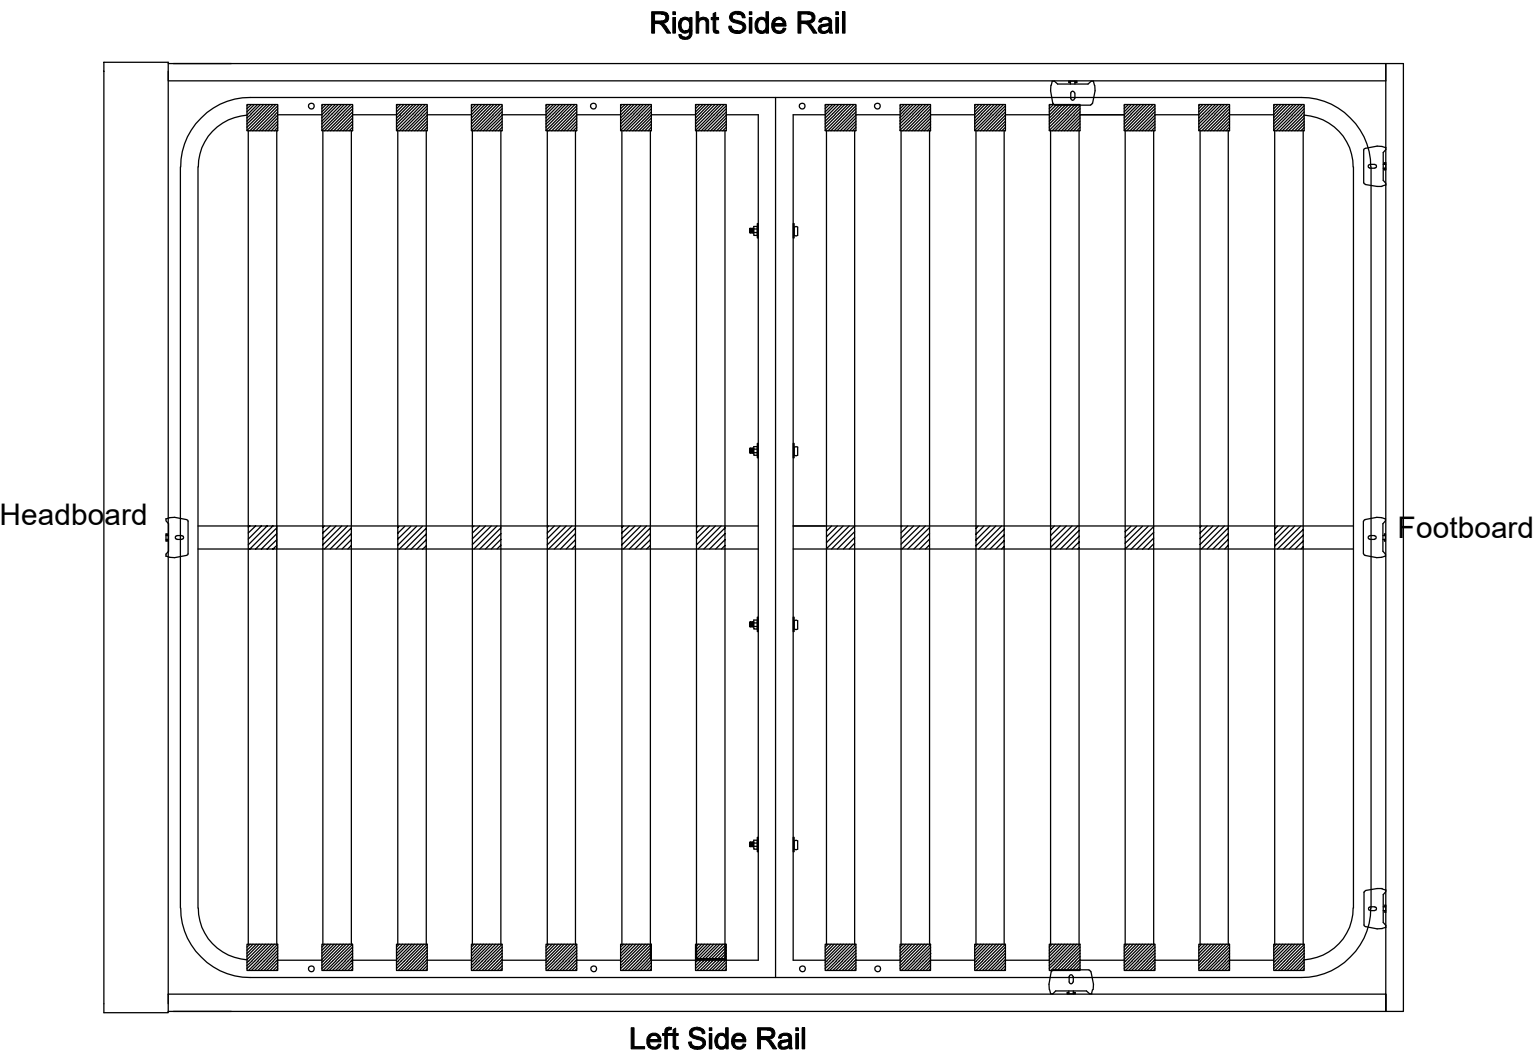


Attention:
Close the slat frame (F/G). Adjust the slat frame to ensure slat frame are centered with even gaps all around before fully tightening bolts. Fully tighten the bolts and nuts on slat frame (F/G) and mechanism + piston (C/D) by using allen key⑥ and spanner⑫.

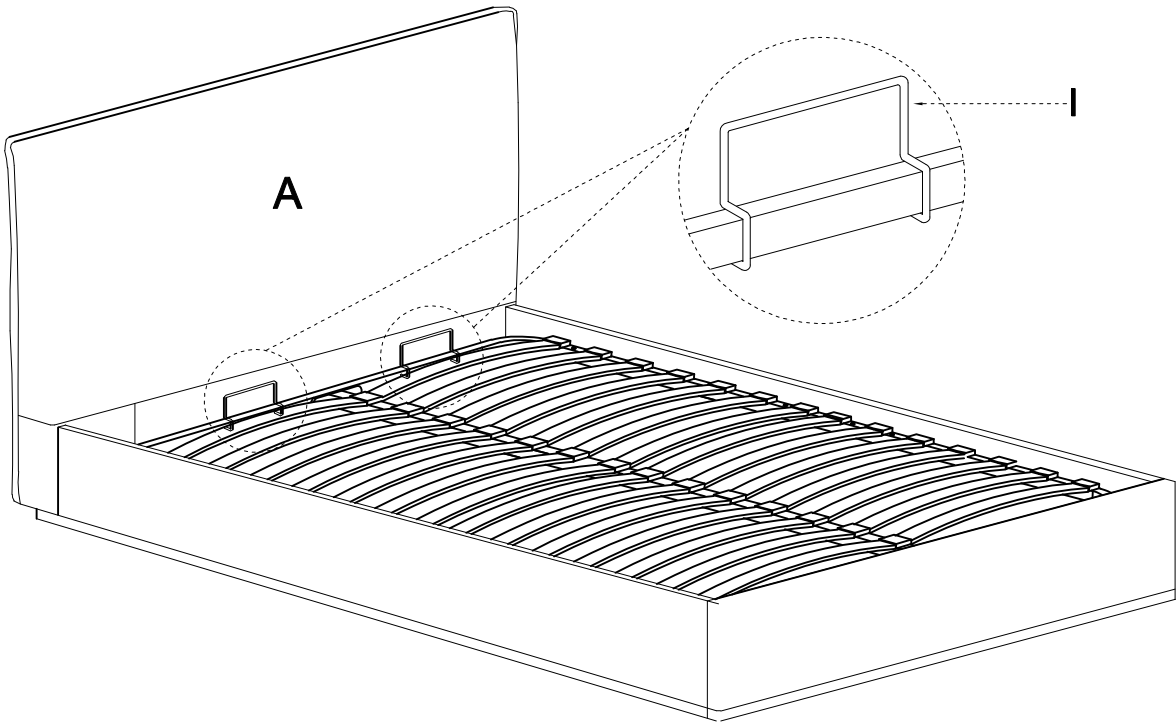


Secure the mattress stopper (I) to slat frame near headboard (A) .

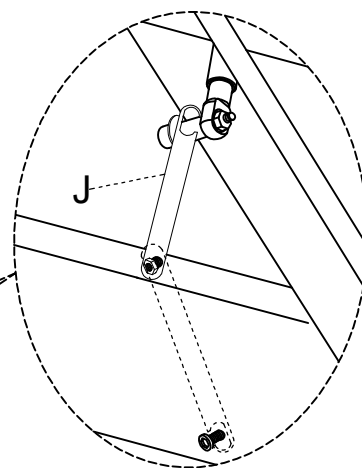

Make sure the Mattress is on the Base before closing.
For Consumer Safety, please Clip/attach the Safety Latch part (J)
to the Mechanism part on both sides to avoid the base falling down,
in case there is a fault with the gas struts.
Please unclip both sides before closing the lift base, then attach the
safety latch on the black bolts as shown above drawing.

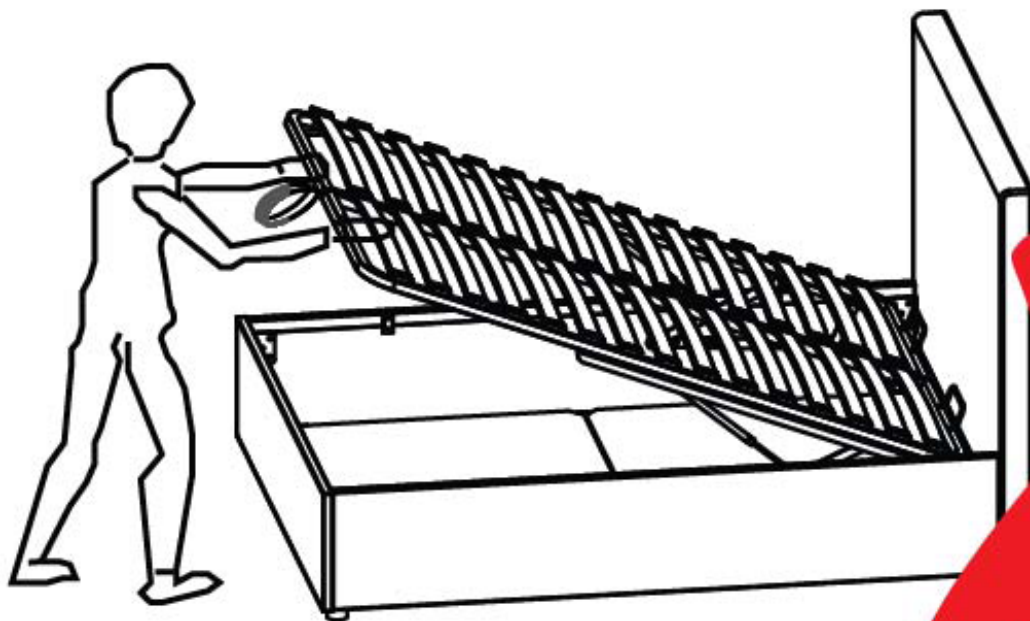

DON' T LIFT WITHOUT MATTRESS

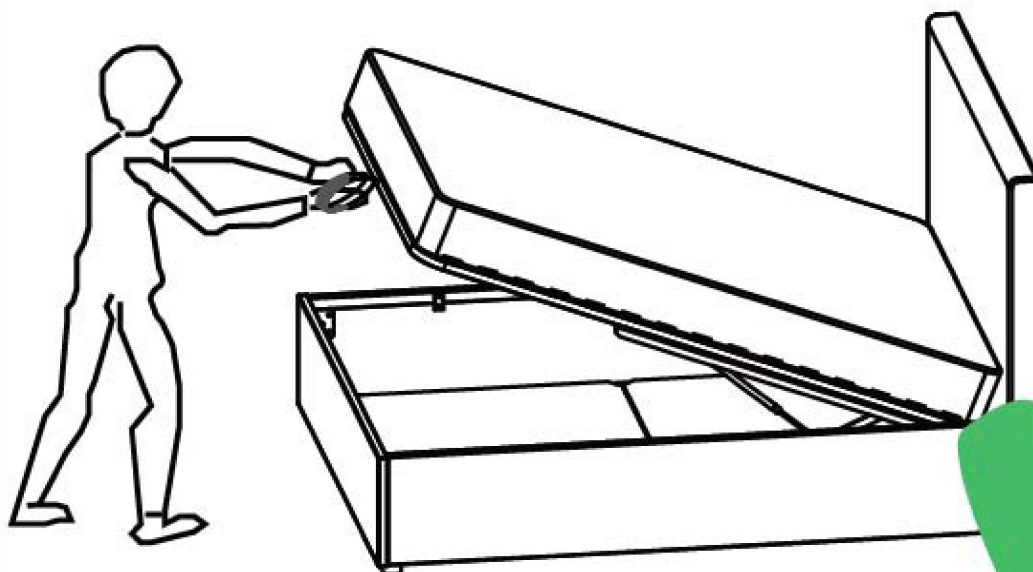

ENSURE MATTRESS IS ON
BEFORE LIFTING

REMARK : ONCE BED IS ASSEMBLED, **DO NOT** SIT, STAND OR APPLY WEIGHT DIRECTLY TO SLATS UNLESS MATTRESS IS IN PLACE.